

## Table of contents

Superwall HF installation manual



1. Direction of installation	01
2. Installation	01
2.1 Horizontal installation	01
2.2 Vertical installation	01
3. Fixing	01
3.1 Direct (visible) fixing	01
3.2 Indirect (hidden) fixing	01
4. Fixing material	02
4.1 Fixing onto steel support structure	02
4.1.1 Direct (visible) fixing	02
4.1.2 Indirect (hidden) fixing	02
4.2 Fixing onto wooden support structure	02
4.2.1 Direct (visible) fixing	02
4.2.2 Indirect (hidden) fixing	02
5. Distance between fasteners	03
5.1 Direct (visible) fixing	03
5.1.1 Distances perpendicular towards clamping direction	03
5.1.2 Distances parallel towards clamping direction	03
5.2 Indirect (hidden) fixing	03
5.2.1 Distances perpendicular towards clamping direction	03
5.2.2 Distances parallel towards clamping direction	03
6. Connections	03
6.1 General notes	03
6.2 Upper connections	03
6.3 Roof parapet	03
6.4 Lower connections (base)	03
6.5 Small openings	03
6.6 External corner flashings	03
6.7 Longitudinal joint	03
6.8 Lateral joint	03
7. Hidden fixing	04

## Sandwich panel wall

### Superwall HF installation manual

## 1. Direction of installation

Superwall HF wall panels can be installed either vertically or horizontally. For horizontal installation panels are mounted from bottom-up. For vertical installation the panels need to be aligned against the main weather direction. The panels are to be installed and fixed by placing them on support profiles at the base. For horizontal installation the vertical joints need to be sealed properly and covered by pilaster strips or other suitable flashings.

## 2. Installation

The first panel needs to be aligned perfectly and fixed immediately. The given building width of the panel needs to be maintained thoroughly; check measurements need to be performed every few panels. We recommend the use of Metecno-pressing tools for the installation of wall panels.


## Installation manual for download



SCAN ME


Connections to adjacent structures must be performed in professional and thorough manner.

### 2.1 Horizontal installation

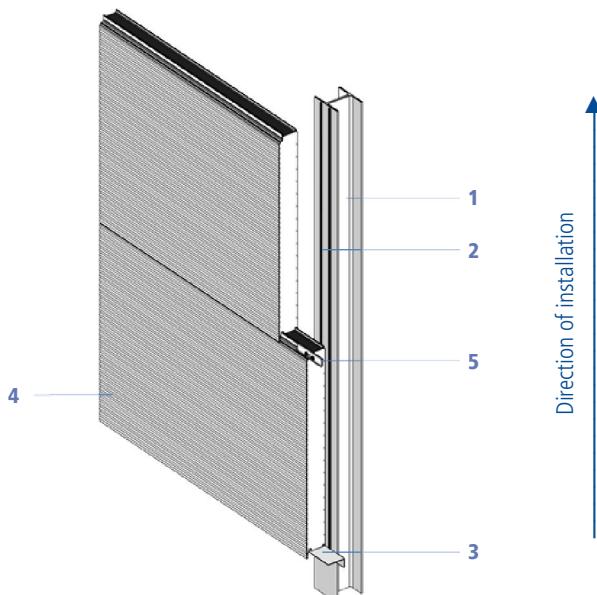

1. support structure, 2. sealing tapes, 3. supporting profile, 4. sandwich panel Superwall HF, 5. fastener

### 2.2 Vertical installation

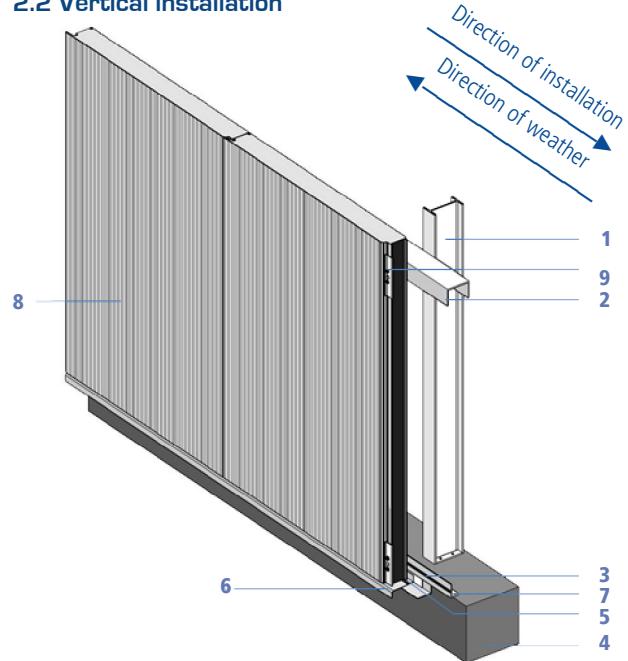

1. support structure, 2. bay rail 3. sealing tape, 4. base, 5. supporting profile, 6. dripping profile, 7. mounting angle, 8. sandwich panel Superwall HF, 9. fastener

minimum support width:

end bearing  $\geq 40$  mm

middle bearing  $\geq 60$  mm

joint area  $\geq 86$  mm (for horizontal installation, larger support widths may be necessary due to structural requirements, see section 6.8)

## 3. Fixing


Screws may be drilled through from the external side directly into the support structure. Indirect (hidden) fixing is possible according Z-10.49-517. Additional sealing of longitudinal joint or additional screwing of the joint itself is not necessary.

### 3.1 Direct (visible) fixing

The necessary number of screws is defined by structural requirements (fastener supporting documents). Execute screw connection as uniform and consistent as possible. Construction-wise, all panels need to be fastened with at least two screws on both end- and middle bearing.

### 3.2 Indirect (hidden) fixing

For hidden fixing, the support structure needs to be set up following the necessary anchor points for wind suction. Fastening of the panels is performed in the present notch in the longitudinal joint.

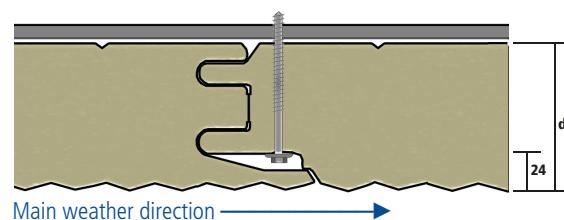

## Sandwich panel wall


### Superwall HF installation manual

Variants for hidden fixing:

1. **1 screw with EPDM-gasket in the joint**
  - core thickness  $d = 100$  mm
  - external sheet  $t_{nom1} \geq 0,60$  mm
  - internal sheet  $t_{nom2} \geq 0,50$  mm
2. **2 screws with EPDM-gasket in the joint**
  - core thickness  $d = 100$  mm
  - external sheet  $t_{nom1} \geq 0,60$  mm
  - internal sheet  $t_{nom2} \geq 0,50$  mm
3. **2 screws with Z-calotte (load distribution plate) in the joint**
  - core thickness  $d = 100$  mm bis 200 mm
  - external sheet  $t_{nom1} \geq 0,60$  mm
  - internal sheet  $t_{nom2} \geq 0,60$  mm

Z-calotte (load distribution plate): 180 mm.  
 $t=1,5$ mm Z-10.49-517

Type of fastener		self-drilling screw	thread-rolling screw
Panel thickness (mm)	Thickness in joint area (mm)	(mm)	(mm)
60	36	$\geq 70$	$\geq 60$
80	56	$\geq 90$	$\geq 80$
100	76	$\geq 110$	$\geq 100$
120	96	$\geq 130$	$\geq 120$
150	126	$\geq 160$	$\geq 150$
200	176	$\geq 210$	$\geq 200$

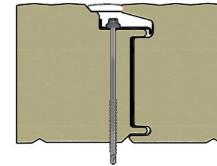

#### 4.2 Fixing on wooden support structure


Minimum diameter for approved screws is generally 6,0 mm (depending on supplier). The required screw length may vary depending on supplier and is defined by:

- type of installation (direct or indirect)
- thickness of the sandwich panel Superwall HF
- minimum screwed-in depth ( $l_{ef} \geq 50$  mm)
- clamping width

##### 4.2.1 Direct (visible) fixing

The following table shows minimum screw lengths for the various core thicknesses of Superwall HF:


Type of fastener	self-drilling screw	thread-rolling screw
Panel thickness (mm)	(mm)	(mm)
60	$\geq 130$	$\geq 120$
80	$\geq 150$	$\geq 140$
100	$\geq 170$	$\geq 160$
120	$\geq 190$	$\geq 180$
150	$\geq 220$	$\geq 210$
200	$\geq 270$	$\geq 260$

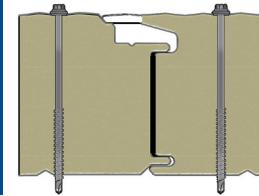

##### 4.2.2 Indirect (hidden) fixing

The following table shows minimum screw lengths for the various core thicknesses of Superwall HF:


Type of fastener		self-drilling screw	thread-rolling screw
Panel thickness (mm)	Thickness in joint area (mm)	(mm)	(mm)
60	36	$\geq 110$	$\geq 100$
80	56	$\geq 130$	$\geq 120$
100	76	$\geq 150$	$\geq 140$
120	96	$\geq 170$	$\geq 160$
150	126	$\geq 200$	$\geq 190$
200	176	$\geq 250$	$\geq 240$

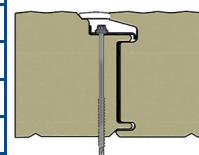

##### 4.1.1 Direct (visible) fixing

Minimum diameter for approved screws is generally 5,5mm (depending on supplier). The required screw length may vary depending on supplier and is defined by:

- type of installation (direct or indirect)
- thickness of the sandwich panel Superwall HF
- material strength of the support structure ( $t \geq 1,50$  mm)
- clamping width

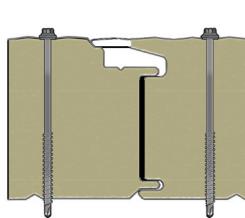

##### 4.1.2 Indirect (hidden) fixing

The following table shows minimum screw lengths for the various core thicknesses of Superwall HF:

Type of fastener	self-drilling screw	thread-rolling screw
Panel thickness (mm)	(mm)	(mm)
60	$\geq 90$	$\geq 80$
80	$\geq 110$	$\geq 100$
100	$\geq 130$	$\geq 120$
120	$\geq 150$	$\geq 140$
150	$\geq 180$	$\geq 170$
200	$\geq 230$	$\geq 220$

##### 4.1.2 Indirect (hidden) fixing

The following table shows minimum screw lengths for the various core thicknesses of Superwall HF:

## Sandwich panel wall

### Superwall HF installation manual



## 5. Distance between fasteners

The distance between fasteners needs to be followed according to Z-10.49-517 as well as the minimum edge distances for wooden support structures according DIN EN 1995-1-1.

### 5.1 Direct (visible) fixing

#### 5.1.1 Distances perpendicular towards clamping direction

Minimum distance for fasteners towards the longitudinal edges is 50mm; minimum distance of fasteners among each other is 100mm.

#### 5.1.2 Distances parallel towards clamping direction

Minimum distance for fasteners towards the cross edges of the wall panels is 20mm plus 3-times the screw diameter; minimum distance of fasteners among each other equals distance of support construction.

### 5.2 Indirect (hidden) fixing

#### 5.2.1 Distances perpendicular towards clamping direction

Minimum distance for fasteners towards the longitudinal lies within the joint resp. in the rib of the external sheet; minimum distance of fasteners among each other equals the building width of 1m.

#### 5.2.2 Distances parallel towards clamping direction

Minimum distance for fasteners towards the cross edges of the wall panels is 20mm plus 3-times the screw diameter, for indirect installation with Z-calotte min.70mm. Minimum distance of fasteners among each other equals distance of support construction.

## 6. Connections

### 6.1 General notes

Connections of wall panels towards adjacent parts of the building need to be realized according Z-10.49-517, according Metecno-connection details as well as according IFBS-rules. Deviant or additional installation steps may be necessary in case of fire resistance requirements according Z-19.52-2096.

### 6.2 Upper connections

The joint between wall-and roof panels is to be sealed against convection and diffusion with adequate flashings and sealing tapes. The remaining cavity is to be filled with polyurethane foam.

### 6.3 Roof parapet

Minimum distance between sandwich panel and parapet-profile is 6mm. The parapet-flashing needs to have a minimum slope of 5°.

### 6.4 Lower connections (base)

Wall panels need to be set onto a supporting profile to accomplish a horizontal edge along the building line. Panels

must not be placed directly onto the base or dripping profile (use mounting aid, e.g. wooden ledge). We recommend a distance of 10mm, essentially 6mm at minimum. The dripping profile needs to have a minimum slope of 5° directed outwards. The dripping edge needs to have minimum distance of 20mm towards the underlying wall. Scarf joints need to be provided with an adequate flashing.

## 6.5 Small openings

Pipe penetrations in the joint areas of the panel are to be avoided. Openings in wall panels smaller than 200mm x 200mm resp. Ø max. 200mm do not require additional support construction and may be realized with adequate sleeves (adapted to the profile geometry of the panel) with circular sealing. For openings in the joint area of the panel, the draining water needs to be dissipated securely outwards on the external layer of the joint. Multiple small openings need to be aligned with minimum disturbance to the panel (e.g. parallel and perpendicular offset of the openings). Bigger openings require a supporting substructure along the edges, which both panel and adjacent building parts are fastened to.

## 6.6 External corner flashings

Joints on external corners of the building need to be sealed adequately and covered with flashings.

## 6.7 Longitudinal joint

To assure sufficient compression of the provided sealing tapes, the given building width (1m) of the panel needs to be maintained thoroughly. This should be done by check measurements every few meters (on the top and bottom for vertical installation; left and right for horizontal installation as well as above and below middle bearing). Protective foil is to be removed from the joints duly before fastening.

## 6.8 Lateral joint

For lateral joints between two wall panels, a minimum supporting width of 86mm is required (joint min.6mm). Vertically installed wall panels require a butt connection in the lateral joint with a dripping profile in between. Joints need to be sealed with adequate sealant/sealing tapes. Vertical pilaster strips for horizontally installed wall panels allow versatile visual possibilities. However, larger supporting widths may be necessary depending on the type of design. Possible variants for covering of lateral joint:

### 1. Flashing, e.g. hat-profile

- supporting width for direct (visible) fixing  $\geq 100$  mm
- supporting width for indirect (hidden) fixing  $\geq 280$  mm

### 2. Extruded aluminum sheath pilaster profile 160

- supporting width for direct (visible) fixing  $\geq 130$  mm
- supporting width for indirect (hidden) fixing  $\geq 310$  mm

### 3. Extruded aluminum sheath pilaster profile 110


- supporting width for indirect (hidden) fixing  $\geq 310$  mm

(see detail: lateral joint for horizontal installation of wall panels XX.08.01 and XX.08.02)




## 7. Hidden fixing


### A: detail of longitudinal joint without Z-calotte (load distribution plate)

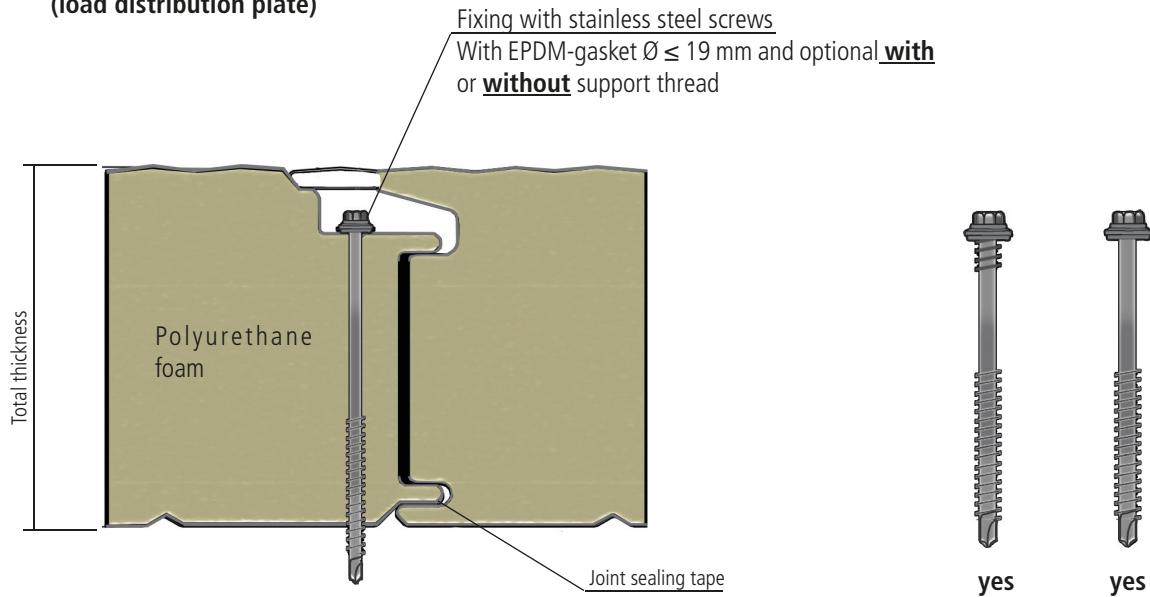

### B: detail of longitudinal joint with Z-calotte (load distribution plate)

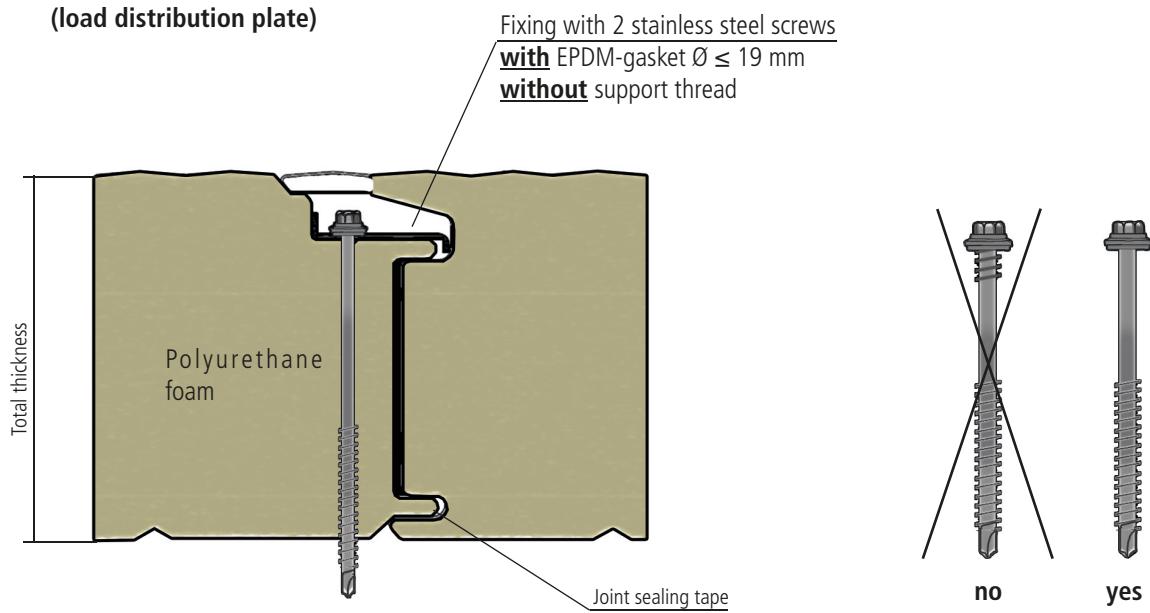

#### Fixing with 2 stainless steel screws

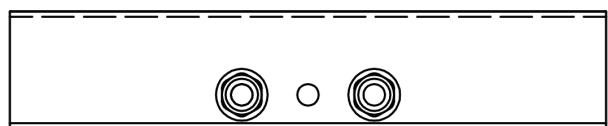

#### Fixing with 3 stainless steel screws

Depending on structural requirements, 3 screws may be necessary.

